


Instructions for Replacing the StowAway Plunger Pin

REV1117

Your Swingaway frame's latching mechanism should look like this.

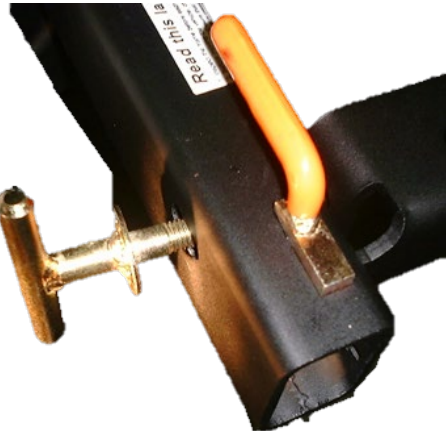

The latch with the orange handle on top is the Plunger Pin.

Step 1: Begin by removing the Endcap. Do not lose the Endcap! Once the Endcap is removed, you can see inside the frame. It should look like this.



The Plunger Pin runs vertically through the middle of the frame.

A spring surrounds the shaft of the plunger pin inside the frame.

A crimp ring sits at the bottom of the spring, holding it in place.

Step 2: To remove the Plunger Pin, use a pair of pliers to squeeze the crimp ring until it flexes open and is able to be removed. Remove the crimp ring. Do not lose the crimp ring!

Step 3: Slide the Plunger Pin out from the top. With the crimp ring removed, the plunger pin should slide out easily from the top, leaving the spring inside the frame. Do not lose the spring!


Step 4: Line up the spring inside the frame so that you can install the Plunger Pin.

Step 5: Slide the Plunger Pin through the hole and the spring.

Step 6:

Locate the notch in the Plunger Pin where the crimp ring attaches. Use a pair of pliers to place the crimp ring into this notch. The crimp ring should be placed directly below the spring. Clamp and enclose the crimp ring firmly into place.

(See diagram to the right).

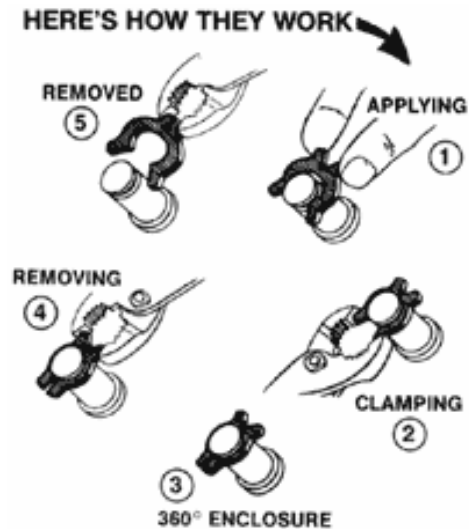

Step 7: Finally, replace the Endcap.

Installation is complete. Double check everything to make sure the latch is working properly and that the clearance issue has been addressed.