



Instructions for Replacing the Standard StowAway2 Carrier Gasket

REV0816

The enclosed gaskets are designed to seal the lid and base junction on the StowAway2 Cargo Carrier.

Note: **Only apply the gasket when ambient temperatures are 60 to 80 degrees.** To apply your gasket:

1. Remove your old gasket(s)
2. Clean the gasket surface thoroughly with a rag and rubbing alcohol to remove dirt and adhesive residue
3. Select the **long** gasket for the lid. Remove two feet of adhesive tape from the gasket and, starting at the back of the lid, apply this section to the lid. Continue to remove the tape and apply the gasket in two foot sections until fully installed. Press each section of the gasket with your fingers to ensure it seals effectively.
4. Select the **short** gasket for the base. Repeat the steps above to apply this gasket.

Lid Gasket



Lid and Base Gasket



Please contact **StowAway2 Customer Service** at (800) 943-5377 with any questions.