



## StowAway Taillight Grommet Sealing REV0610

### Tail Lights:

1. Check that the tail lights are inserted properly and securely.
  - a. Standard tail lights feature a crown that should protrude approximately ½ inch from the carrier's face.
  - b. LED tail lights should be flush with the front of the carrier.
  - c. There should be no space between the tail lights and the surrounding grommet. Contact us if you need a replacement grommet(s).
  
2. If you suspect water penetration around the tail lights you can do the following:
  - a. Unplug the wire connector to the tail light.
  - b. Remove the tail light by pushing on the front of the light firmly (it is a tight press fit) so that it pushes into the box. The tail light is a sealed unit so the bulb will not come out.
  - c. Remove the tail light grommet.
  - d. Apply a bead of silicone into the outside grommet channel as shown.
  - e. Reinstall the grommet in the box.
  - f. Reinstall the tail light from the outside of the box by tilting the light slightly and pushing it (firmly) into the tail light hole. It is a tight fit to help prevent water penetration.
  - g. Once in the hole, make sure the light is vertical and positioned as described in No. 1 above.
  - h. Repeat steps with the second tail light.

Apply bead of silicone:

