



## Instructions for Replacing a StowAway Taillight REV0817

### Removing your existing taillight(s):

1. Unplug the wire connectors from your existing taillight.
2. Remove the current taillight by pushing firmly on the light from the outside. This will push the light into the box. (Note – the light is a sealed unit and is designed to withstand pushing for removing and installing).
3. The taillight grommet that surrounds the tail light should remain in place.



### Installing a new taillight(s):

1. Position the light in the box's hole from the outside of the box as shown.
2. Push the light into place.
3. Ensure that the light is evenly installed and that the taillight grommet stays in place. Connect the wire harness to the light and test for functionality.



Note – See the [StowAway2.com](http://StowAway2.com) video library for a video on replacing a StowAway Taillight.

Please contact **StowAway2 Customer Service** at (800) 943-5377 with any questions.