Replacing the StowAway Latch Assembly REV 0621

1. Using pliers or a screwdriver to remove the **push washers** and/or cotter pins from the latch rod studs. (Circled below).

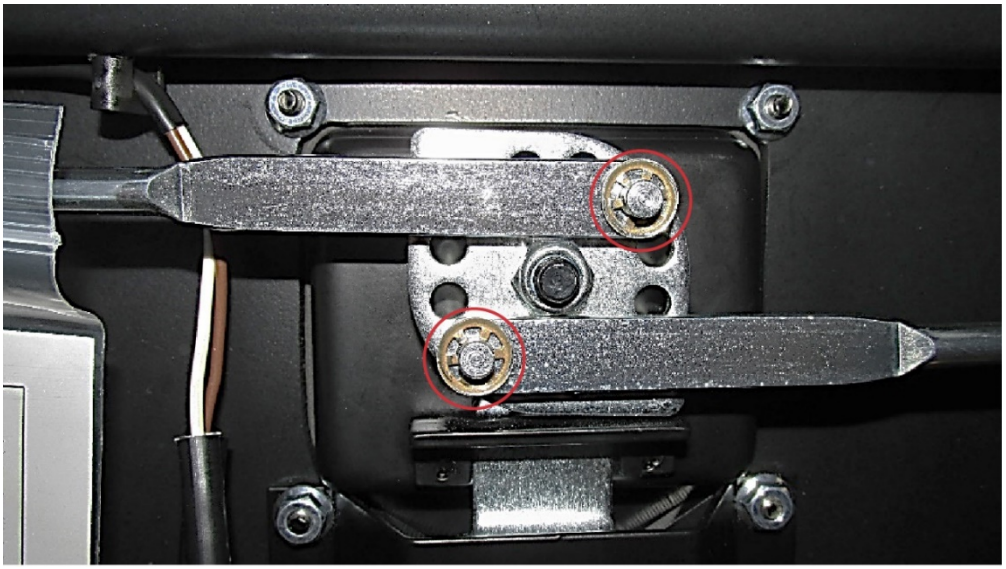

2. Remove the **mounting nuts** from the four corners of the latch. (Circled below)

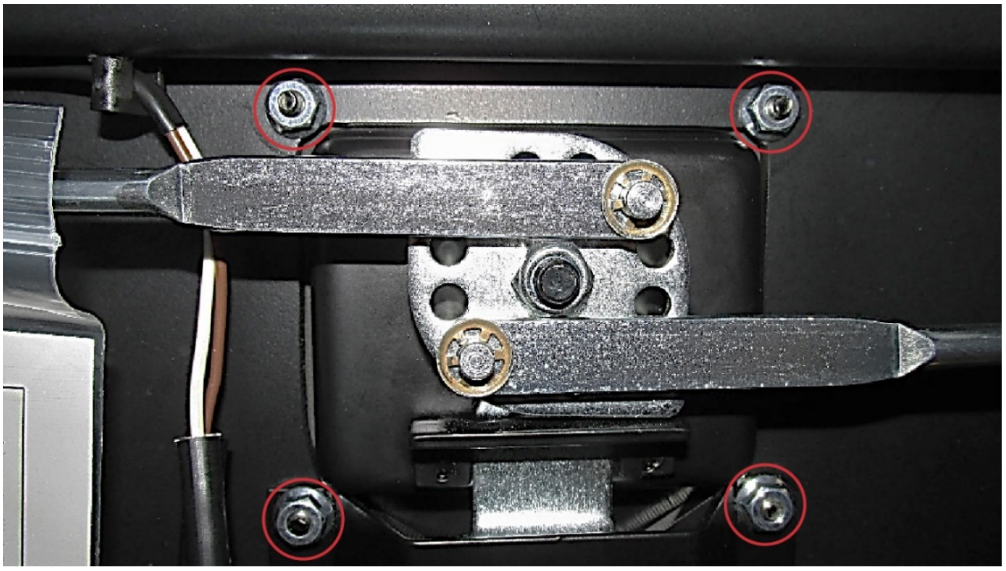

3. Remove the latch and the latch guard. Replace it with the new latch.

4. Hand tighten the nuts to the four mounting studs. Be sure to include the latch guard on the bottom new studs. Once hand tightened, use a wrench or small socket to tighten nuts one half turn. Do not overtighten nuts.
5. Push the **latch rods** over the latch rod studs.

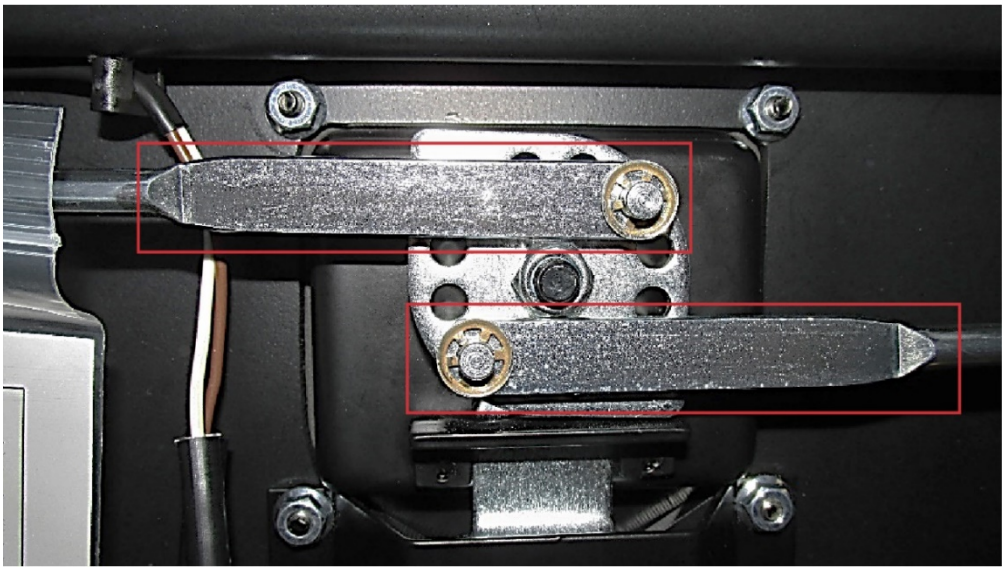

6. Install a push washer and/or cotter pin onto each latch rod stud to hold rods in place.
7. Test the new latch and lock to ensure that they operate properly.

Questions or Concerns?

Please call StowAway2 Customer Service at 800-943-5377 or contact us via email at info1@stowaway2.com with the subject line “Latch Question.”