

# Stowaway Max or Standard Box on Fixed Frame - Exhaust Shield Instructions (PN #020.87)

rev0721

**1.** Mount the StowAway Max box to the fixed frame. Slide the mounted StowAway into the hitch.

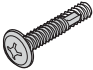



**2.** Position the exhaust shield at the base of the box closest to the vehicle, in line with the exhaust pipe on that side. Mark two spots on the bottom of the box through the exhaust shield mounting holes.

**3.** Drill holes in the marked spots with a 1/4" drill.

**4.** Mount shield to box through each of the two holes using the included hardware. Sequence hardware as shown.

**5.** Repeat process on the other side of the box if you have dual exhausts. A shield on the driver's side may prevent the drain plug from fully seating but the shield will prevent water from entering the box at this point.

**Hardware :**

			
Screw 1/4" x 1-1/2" Qty 3	White Nylon Spacers Qty 3	Flat Washers Qty 12	1/4" Locknuts Qty 3

