



Rev. 0419

StowAway License Plate Light & Bracket Instructions (020.7)

Parts Included:

- 1 – Bracket Assembly
- 2 - 10-24 x 3/4" Screws
- 2 - 10-24 Flange Nuts
- 2 – Lic. plate Screws
- 2 – Lic. plate Nuts

Tools Needed:


- Drill
- 3/16" Drill Bit
- 5/16" Drill Bit
- 3/8" Wrench
- Phillips Screwdriver

www.StowAway2.com

800-943-5377

StowAway License Plate Bracket Installation:

1. Locate the dimples under the box latch. Drill a 3/16" hole at each of the outside dimples.
2. Drill a 5/16" hole in the center of the two outside holes, 1/2" above the outside holes. The Max box will have a dimple for this hole. Feed the license plate bracket wires through this hole as you position the assembly on the box.
3. Insert and tighten the mounting screws and nuts to fasten the bracket assembly to the box. The nuts should be on the inside of the box.
4. Connect license plate light wires to StowAway wire harness. Dark to dark and white to white.
5. To install license plate, align the two license plate nuts with the license plate holes. Thread the two license plate screws into the nuts. Tighten with a Phillips screwdriver.

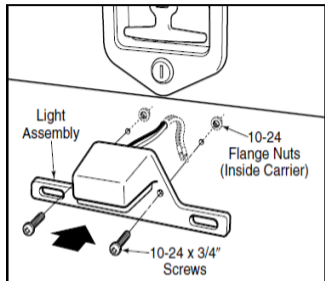

Note: Test license plate light before operating vehicle, it should be illuminated whenever the vehicle's running lights are on.