

StowAway Tailgate Grill Station Assembly Instructions

Rev120417

Please read all instructions prior to installation or use.

Parts included:


- Swingaway frame
- Cargo rack & assembly hardware
- Cuisinart grill
- Cutting board
- 4 loop clamps for mounting grill to rack
- 4 screws, 4 nylok nuts, 8 washers (4 wing nuts for quick release)
- Hitch tightener

Tools needed:

- Socket set
- Wrench set or adjustable end wrench
- Phillips screwdriver

Assembly Directions:

- 1) Assemble the swingaway frame and cargo rack per the instructions included.
- 2) **Installing the grill.** The grill may or may not be fastened to the cargo rack. If you do not fasten the grill to the rack we recommend using our cargo net or bungee cords to anchor it to the grill when driving. For securing the grill you may want to use the Lockless Monster.
- 3) To fasten the grill to your rack first determine the grill orientation you prefer. The left image will enable you to grill directly behind the vehicle when the frame is swung open, with the grill facing the vehicle when the frame is swung closed. The right image will enable you to grill with the frame swung open or closed.

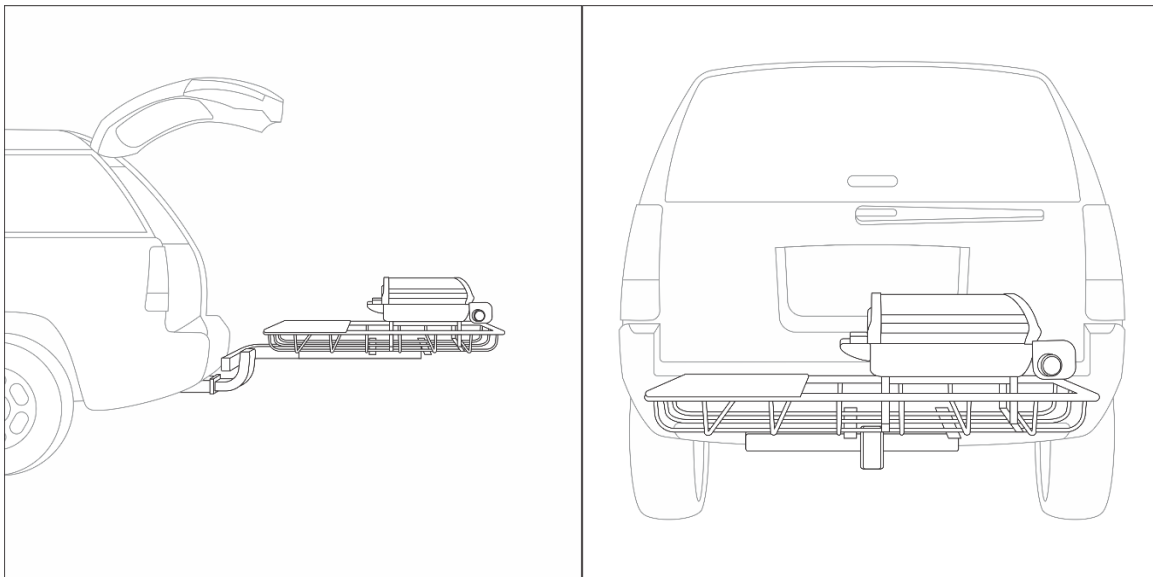

- 4) Once you've determined the orientation, position the grill on the rack as shown below. Be sure to locate the grill inside the front to back tube (as shown) to leave room for a portable propane tank. Locate the nearest cross tube to each of the grill feet, and slip a loop clamp over the tube at that point. Align the grill feet holes with those in the loop clamp and drop a screw and washer through the hole. Add a second washer and nut from below and hand tighten. Repeat for each grill foot. Once all four screw sets are installed tighten nuts so they are snug. Do not over tighten.

Note: To use the wing nuts or to allow easier access to the screw head, reverse the screw and push it through from the under the rack, tightening the wing nut from the upper surface of the grill foot.

